

How to Upgrade your Cyclades ACS

Obs.: If your current firmware version is 3.0.0 or above you can skip the steps 3, 5, 6, 7, 8 and 9.

1) Download the latest firmware from

<http://www.avocent.com/support/default.aspx?id=5590>

and place it on your local FTP or SSH/SCP server.

2) Access the ACS via its local console port as root

3) Copy the file /etc/portslave/pslave.conf to a FTP server.

4) Overwrite the file /mnt/flash/zImage with the file you just downloaded. You can transfer the file via FTP or SCP.

5) Set the unit back to factory default executing

```
# defconf
```

6) Reboot your unit.

7) After the unit boots, login as root and type the command

```
#wiz
```

It'll guide you through the network configuration.

8) Go to the directory /etc/portslave/ and copy the file pslave.conf back from the FTP server.

9) Enter the commands:

```
# saveconf  
# signal_ras hup
```

If you have any questions, please contact our Technical Support team at support@mirapath.com.